


We're here for life

## Anti-Ligature Stainless Steel Coat Hook

**Datasheet and Installation Guide** 

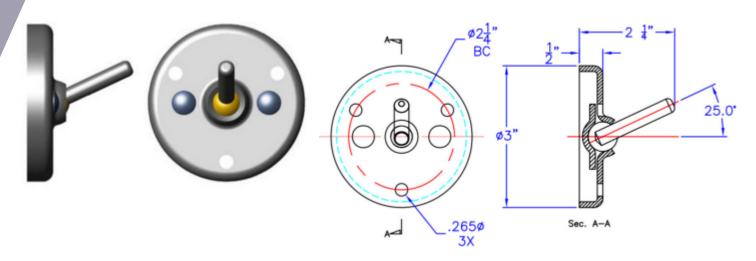

Construction Flang: 11 quage x 3" diameter type 304 stainless steel

Hook: 5/16" diameter sainless seel rod with pivoting tabll joint that releases

under excessive load.

Operation Hook with pivoting ball joing release when excessive load is applied.

The hook can be rested by hand when required.

Installation Use flange to mark holes at desired heigh.

Flange has (3) mounting holes to receive 14 G x 1 1/2 Resytork Self Taper Screws

(requires T30 Drive Not Provided)

Caution: unit is only as strong as the anchoring devices and the wall in which it is

mounted to.

Guide Specification Exposed mount security towel hook.

Hook releases when excessive load is applied.

Hook is reset when required. One piece construction.

Satin #4 finish

## **ABOUT HIPAC**

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia P. +61 2 4823 0000 E. info@hipac.com.au

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

hipac.com.au

