




## Electronic Integrated Override Lockset

Combining patient independence with safety and security.

### Balancing safety and service user empowerment

- Promotes patient independence and helps to facilitate recovery .
- Built-in emergency override ensures staff can gain access in under 5 seconds - no toolkit required.
- One staff access card operates any number of doors.
- Lock can be operated with an access card, key fob or wristband.

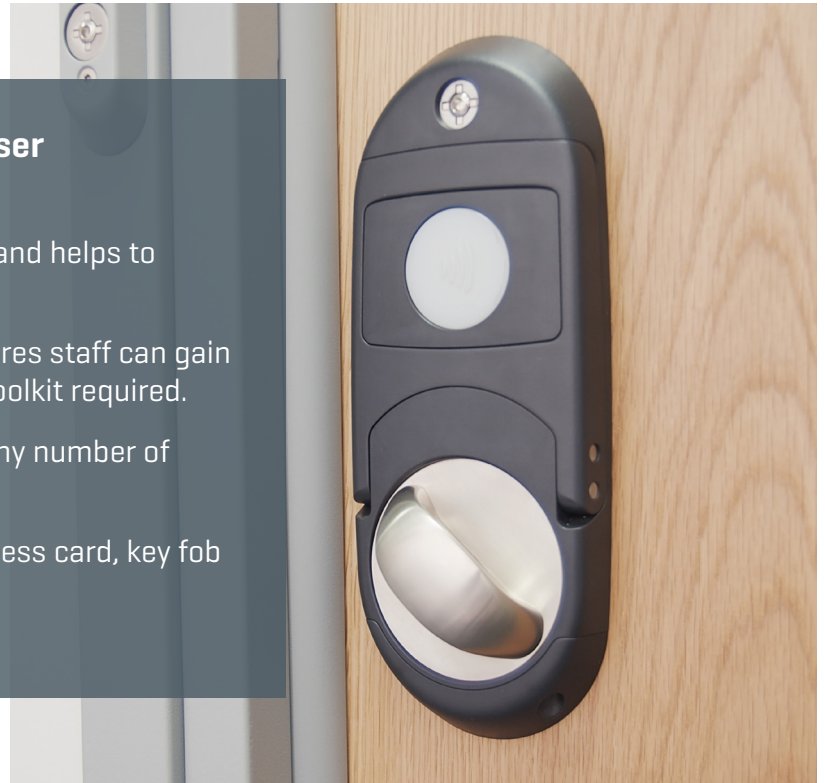

### Overcoming determined barricades in 5 seconds

Barricades do happen and it's important that clinical staff are confident in overcoming them to resolve a hostage scenario or to help a service user attempting self-harm. That's why we've developed this electronic lockset with the mechanical override integrated into the lockset, to ensure it's ready for quick , reliable access.



#### Empowers patients and aids recovery

Assists in reducing restrictive practices to create a therapeutic environment.



#### Reliable mechanical override

Using the Lifeline key to release, the emergency lever will mechanically override the electronic lock - guaranteeing access into the bedroom in just 5 seconds.




#### Peace of mind for staff

All access permissions are individually pre-programmed for each patient's wristband depending on their care plan- and any updates are instant.




## Electronic Integrated Override Lockset

Solo, Networked & Hard Wired

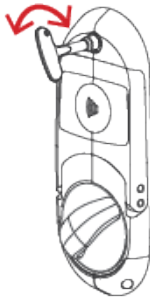


### Activate the emergency lever using the staff-only Lifeline Key

The same key is used to operate our vision panel and anti-barricade stop. In an emergency, the integrated override can be operated within 5 seconds.

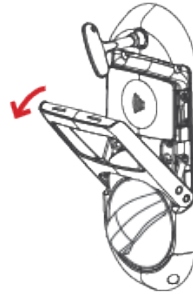

### Once activated, the emergency lever will automatically eject. Push down on the lever to the horizontal position to unlock the door

The internal ratchet mechanism deactivates the internal turn/pull and prevents the service user from re-locking the door or holding it from the inside. In extreme situations, the safety spindle will shear under heavy resistance.

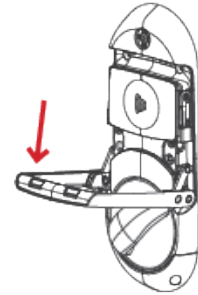

### Use the emergency lever to pull the door open

This handle provides a strong, comfortable grip, giving you advantage over the internal turn/pull and allowing you to overcome a service user's attempts to hold the door shut.

## Solo

Solo locksets are not networked, making them suitable for smaller wards where real-time updating is not required. Featuring electronic locking with mechanical override, the credentials can be programmed at the door.

## Networked

Operated via a wireless network, our smart platform provides secure management of the electronic access points on your ward, with real time updates. Having no interference to existing technology systems, but can manage existing compatible electronic locks using our wall readers. Individual access permissions are programmed remotely at a central ward-based computer from head office - making it ideal for multi-site organisations. Quick and easy card management improves security for temporary cards added with an automatic expiry.

## ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia  
P. +61 2 4823 0000 E. [info@hipac.com.au](mailto:info@hipac.com.au)

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

[hipac.com.au](http://hipac.com.au)

ABN 27 600 353 688